

INSTRUCTION LHV TONG HANGER

Notes:

- 1 - Put flange of hanger against ballast channel as shown.
- 2 - Pull out on opposite side of hanger in direction indicated just enough to clear ballast channel and rotate into place.
- 3 - Position bracket along ballast channel in desired location and tighten nut on carriage bolt to secure bracket in place.

TOLERANCE: (Unless otherwise specified, tolerance for dimensions are as follows)	
Fractions	+/- 1/64
Angles	+/- 2 degrees
Decimals	+/- 0.005