



WIRE GUARD LHV INSTALLATION

TOLERANCE: (Unless otherwise specified, tolerance for dimensions are as follows)	
Fractions	+/- 1/64
Angles	+/- 2 degrees
Decimals	+/- 0.005

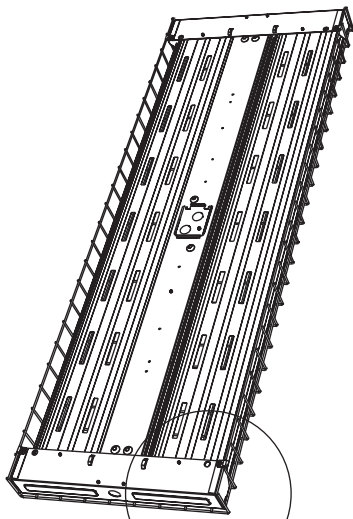

Remove End Cap screw and secure with screws provide with Wire Guard


Wire Retaining Clip provided with Wire Guard

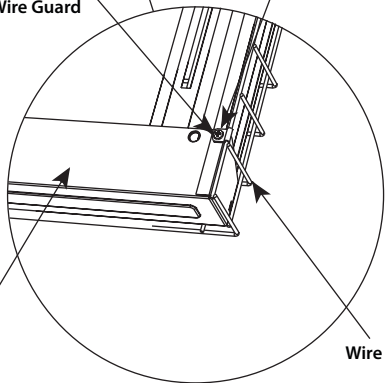

Fixture End Cap

Wire Guard


FOR FIXTURE WITHOUT SIDE RAILS

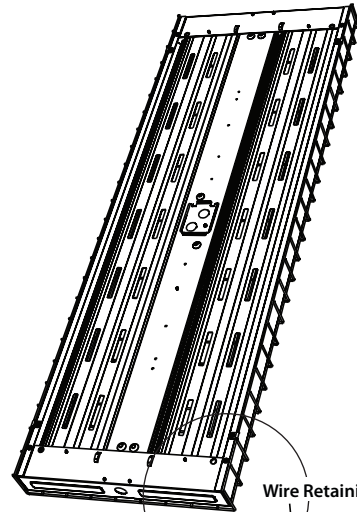

Wire Retaining Clip


Side Rail

Fixture End Cap

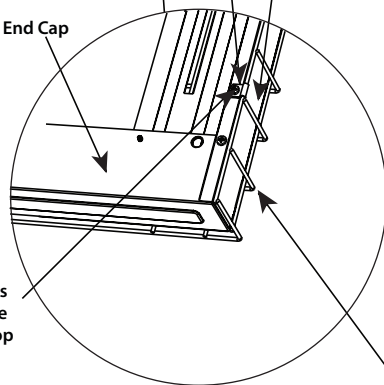

Secure with screws provided with wire guard in hole in top of side rail

Wire Guard

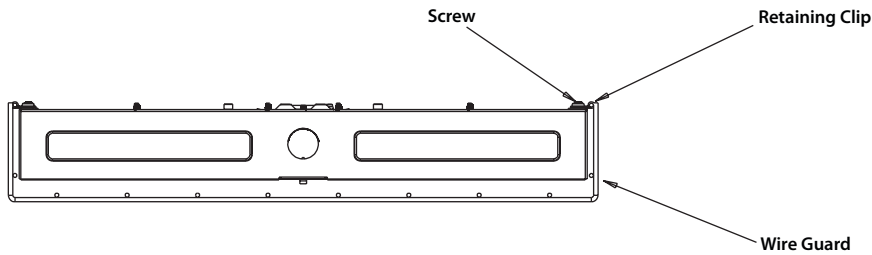

Screw

Retaining Clip

Wire Guard