



OCCUPANCY SENSOR INSTALLATION INSTRUCTIONS

*INSTALL ONLY WITH PROGRAMMED START ELECTRONIC BALLAST. USE OF OCCUPANCY SENSOR WITH INSTANT START BALLASTS MAY VOID WARRANTY.

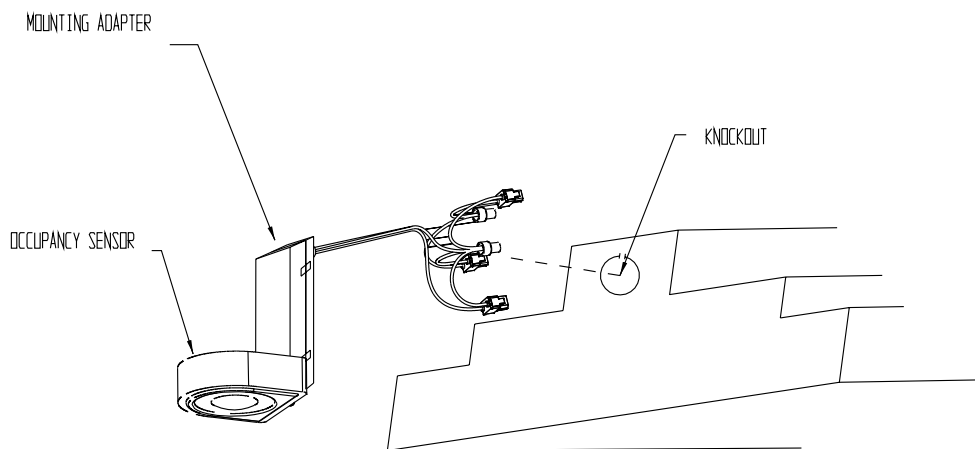


- 1) REMOVE FIXTURE BALLAST ACCESS COVER.
- 2) REMOVE KO AT CENTER OF END CAP AT ONE END OF FIXTURE.
- 3) FEED OCCUPANCY SENSOR WIRES THROUGH KO TO CENTER OF FIXTURE.
- 4) SNAP OCCUPANCY SENSOR BRACKET ONTO FIXTURE AS SHOWN.
- 5) CONNECT SUPPLY LEADS TO ORANGE DISCONNECT CONTAINING THE BLACK LEAD FROM THE OCCUPANCY SENSOR. IF A CORD SET ACCESSORY IS ALSO BEING INSTALLED, ATTACH ONE OF THE ORANGE DISCONNECTS FROM THE CORD SET TO THE OCCUPANCY SENSOR BLACK LEAD ORANGE DISCONNECT.
- 6) DISENGAGE THE ORANGE DISCONNECTS AT THE END OF THE BALLAST LEADS AND DISCARD THE REMAINING SUPPLY SIDE PIECE.
- 7) CONNECT THE ORANGE DISCONNECT(S) ON THE OS ASSEMBLY TO THE ORANGE DISCONNECTS ON THE BALLAST LEADS, ONE FOR EACH BALLAST. IF ONLY ONE BALLAST IS IN THE FIXTURE, USE EITHER ONE OF THE ORANGE DISCONNECTS ON THE SENSOR LEAVING THE SECOND ONE UNUSED.
- 8) REINSTALL BALLAST COVER.

OS1 ASSEMBLY

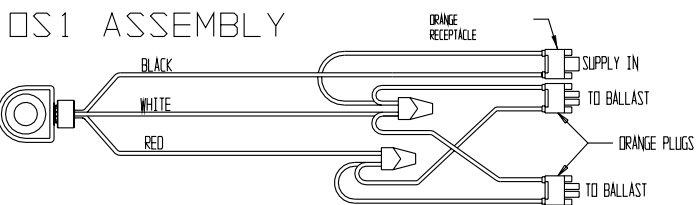

OS2 ASSEMBLY

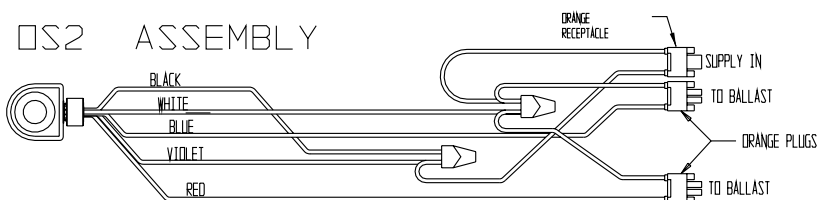

Warning:
This Product Contains Chemicals Known To The State of California To Cause Cancer, Birth Defects, And/or Other Reproductive Harm. Thoroughly Wash Hands After Installing, Cleaning or Otherwise Touching This Product.

A	-	RELEASED	BCG	10-5-09	Columbia LIGHTING	93025693
REV	EC #	CHANGE	BY	DATE		