

INSTALLATION INSTRUCTIONS

Warning: Electrical Shock - Risk of fire - Potential!


- This product is to be installed by a qualified electrician only. Reflector kit installation requires knowledge of fluorescent lighting electrical systems.
- This kit is to be installed only in fixtures with construction features consistent with drawings on specification sheet.
- Check for concealed wiring and components prior to drilling or using TEK screws.
- Do not expose wiring to sheet metal edges or other sharp objects to prevent damage.
- If supply wires are located within 3" of the ballast, use feed wire suitable for at least 90°C.
- Install in accordance with local and National Electrical Code (NEC).
- Manufacturer assumes no responsibility for the improper installation or application of this kit.
- Contact the manufacturer for any questions or concerns regarding installation of this kit.

Caution:

This product is intended to fit most popular lensed and parabolic troffers.

- Manufacturer assumes no responsibility for the improper installation or application of this kit.
- Contact the manufacturer for any questions or concerns regarding installation of this kit.

Kit includes:

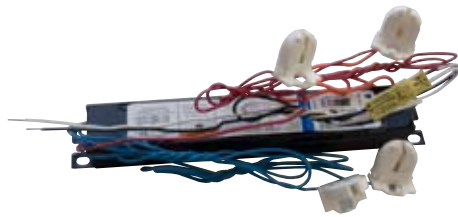

(1) Pre-wired Ballast



Socket Slots

(2) Top Mount Brackets



(4) Tek Screws



(1) 2' or 4' Reflector Assembly

INSTALLATION INSTRUCTIONS

Prepare Existing Fixture:

Warning: Turn off power supply before installation or servicing of this kit.



1. Lower door frame.



2. Remove lamps.



3. Remove ballast covers.



4. Remove sockets and socket brackets



5. from both ends.



6. Disconnect power from the existing ballast, remove, and recycle.



7. Install new **Pre-wired Ballast** in the center of the existing frame.



8. Wire ballast to power using provided disconnect



9. Insert sockets into **Top Mount Brackets**.

INSTALLATION INSTRUCTIONS



10. Center bracket and place adjacent to end cap. Using provided **Tek Screws** install both **Top Mount Brackets** to top wall of housing.



11. Remove protective film from **Reflector**.



12. Squeeze **Reflector Assembly** and snap into tabs located on the **Top Mount Bracket**. Install lamps.



13. Swing existing door frame into place.

Lamp Disposal:

Fluorescent lamps are considered toxic waste. Please dispose of lamps using a licensed waste handling company or use safe, recognized equipment.

Ballast Disposal:

Many State and Municipal Building Authorities require special disposal of ballasts. It may be required that the old ballast be removed from and separated from other materials.

Please check with local authorities on the proper disposal or recycling of all materials.